

## EJF1TL60

## EPB &amp; James Hardie Hardie™ Flex Sheet

## Two Way FRR

## External Wall - Timber Frame

## Load Bearing

System Number	Lining Suffix	FRR	Insulation	Noise Control STC	Lining Requirement
<b>EJF1TL60</b>	<b>-F13</b>	60/60/60	Hardie™ Mineral	43	1 x 13mm EPB FireSmart on Internal side James Hardie Hardie™Flex Sheet to External side

**Framing, Wall Height, Load and Framing Dimension**

Timber framing to comply with relevant sections and clauses of NZBC B1: Structure and NZBC B2: Durability. Timber framing must be in accordance with NZS3604 stud tables for load bearing or non-load bearing partitions. Furthermore;

- Minimum framing dimension is 90 x 45mm.
- Nogs must be in place at a maximum of 800mm centres.
- Maximum stud spacing's are 600mm centres.
- The fire rated walls built close to boundary are also required to achieve post fire stability in either direction in accordance with the NZBC verification method B1/VM1, paragraph 2.2.4

Refer to latest James Hardie Fire & Acoustic Design Manual figures and tables for further detail.

**Underlay****Fire Retardant Flexible Underlay**

Install any Fire Retardant Flexible Underlay beneath the claddings, that complies with Table 23 of E2/AS1 and has a flammability index not exceeding 5.

**Cavity Batten**

When Cavity Batten is required, use a nominal 20mm Timber Cavity Batten. Refer to James Hardie Hardie™ Flex Sheet Technical Specification.

When Cladding can be directly fixed without a cavity batten then a fire retardant flexible underlay must be used.

**James Hardie Hardie™ Flex Sheet Cladding**

James Hardie Hardie™ Flex Sheet cladding to external side of the timber framing. Consider the nail length required depending on the type of fixing i.e. Cavity fixing or Direct fixing. Refer to both James Hardie Hardie™ Flex Sheet Technical Specification AND the James Hardie Fire & Acoustic Design Manual for information regarding fixing and finishing.

**Wall Insulation**

Insulation must be installed between studs and noggs. Use Hardie™ Mineral insulation.

**EPB Plasterboard Lining**

**NB:** The installer must look for the Product Identification Code on the face paper to ensure the correct board type is installed. Refer to the Face Paper Product Identification Code table on this page.

One layer of 13mm EPB FireSmart lining to internal side of framing. Vertical fixing only permitted. Use full height sheets where possible when fixing vertical. All sheet joints must be fixed over solid timber framing. Sheets shall be touch fitted.

**Fixing of EPB Plasterboard Internal Linings****Fasteners**

41mm x 6g High Thread Drywall Screws


**Fastener Centres**

Fix at 300mm centres around sheet perimeter and up all intermediate studs. Place fasteners 50mm from sheet corners along the top and bottom plates. On end studs place additional fasteners 50-60mm vertically and no close than 10mm from plate to stud connections.

Place fasteners no closer than 12mm from the sheet edges and 18mm from sheet ends. Place fasteners at 200mm centres where sheet end butt joints occur.

**Jointing and Finishing of EPB Plasterboard**

All fastener heads stopped and all sheet joints reinforced with paper jointing tape and stopped. All in accordance with Elephant Plasterboard Installation Guide.

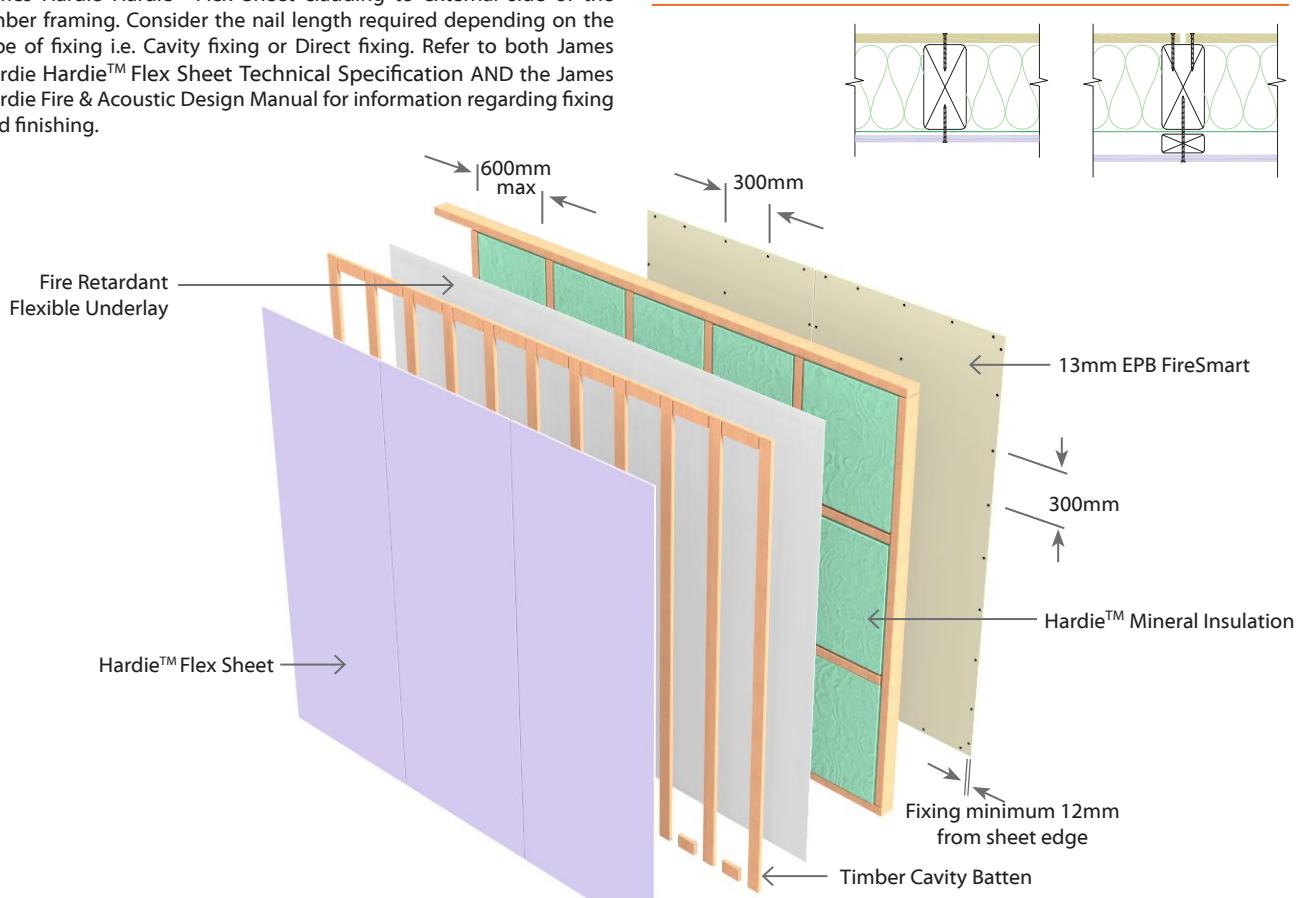

(installed as per James Hardie Hardie™ Flex Sheet Technical Specification)

N.B. The above drawings are for illustrative purposes only.

**Face Paper Product Identification Code**

13mm EPB FireSmart | **F13**



Freephone 0800 353 742

[www.elephantplasterboard.co.nz](http://www.elephantplasterboard.co.nz)

Version update: March 2025